


DIGI-CODE DC-LM3 Installation Instructions

SECTION 1

LOCATE AND IDENTIFY THE LEARN BUTTON ON YOUR GARAGE DOOR OPENER

Locate the **Learn button** on your garage door opener powerhead and then use the pictures below to identify which version of opener you have. The color of your openers **Learn button** will identify its type.

Note: Your garage door opener may look different.

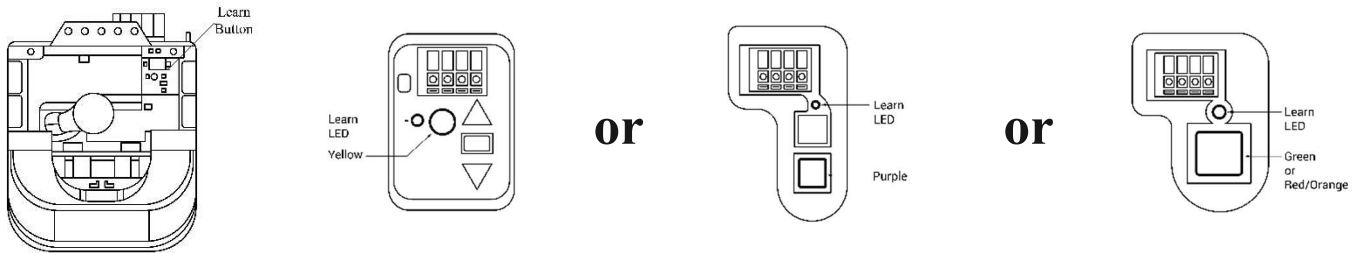


Garage Opener Type	Button Color	# of Presses for Programming
Security + 2.0	Yellow Learn Button	1
Security + 315 MHz	Purple Learn Button	2
Security + 390 MHz	Red\Orange Learn Button	3
Billion Code 390 MHz	Green Learn Button	4

SECTION 2

ASSIGNING THE REMOTE TO YOUR OPENER

Use a coin or the curved end of the visor clip to disengage the lower half of the front cover. This will expose the **Program button** and the battery compartment.

- 1) Using the chart above, determine the type of your opener and the number of presses needed for programming. Press and hold the **Program button** on the remote until the red LED lights up.
- 2) While the red LED is lit, press the button you wish to use to control the door. If more than one press is needed to program wait until the red LED stops flashing and lights solid before subsequent presses.
- 3) Exit programming by pressing either of other two buttons.
- 4) Repeat steps 1-3 to program the additional remote buttons to any other compatible openers.
- 5) Re-attach the lower half of the remote front.

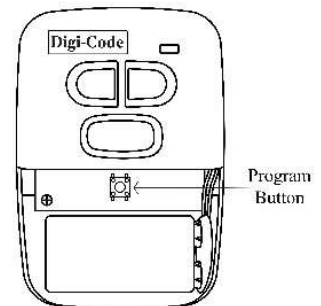

SECTION 3

PROGRAMMING THE REMOTE TO CONTROL YOUR OPENER

- 1) Press and release the **Learn button** on your garage door opener.
- 2) While the **Learn light** is lit, press the button on the remote programmed in Section 2 until the garage door opener lights flash or two clicks are heard.
- 3) To test, press the same programmed button on the remote. The garage door opener will activate.

SECTION 4

REPLACING THE BATTERY

Replacing the battery will not affect the programming of the remote.

1. Take note of the battery cable and battery position before removing. New battery must be installed in the same position
2. Remove the battery cover and unclip the battery from the connector.
3. Clip a new 9V battery to the connector.
4. Place the battery in the cradle and press down. After seating the battery, reapply the cover.

WARRANTY

All Digi-Code door related products carry an eighteen (18) month warranty against defects in workmanship or material. This warranty begins at the date of manufacture, for eighteen months. Digi-Code warrants our product only to our authorized dealers and distributors, and not to the end customer. If you have any questions about our warranty, please ask your dealer to determine the nature and scope of their warranty. Digi-Code does not assume, and is not responsible for, any real or consequential damages from claims against the performance of our product, nor is it liable for any costs related to the loss of life, property, or revenue. Further, Digi-Code is in no way responsible for installation of our product, and will assume no cost related to reinstallation or removal. Digi-Code's warranty is in lieu of other warranties, expressed, or implied.

CAUTION: Any changes or modifications in intentional or unintentional radiators which are not expressly approved by Digi-Code USA Inc. could void the user's authority to operate this equipment. This applies to intentional or unintentional radiators certified per part 15 of the FCC rules and regulations.

DIGI-CODE USA, INC.